


KW Trams

KW 106 LCC works class J.

Parts

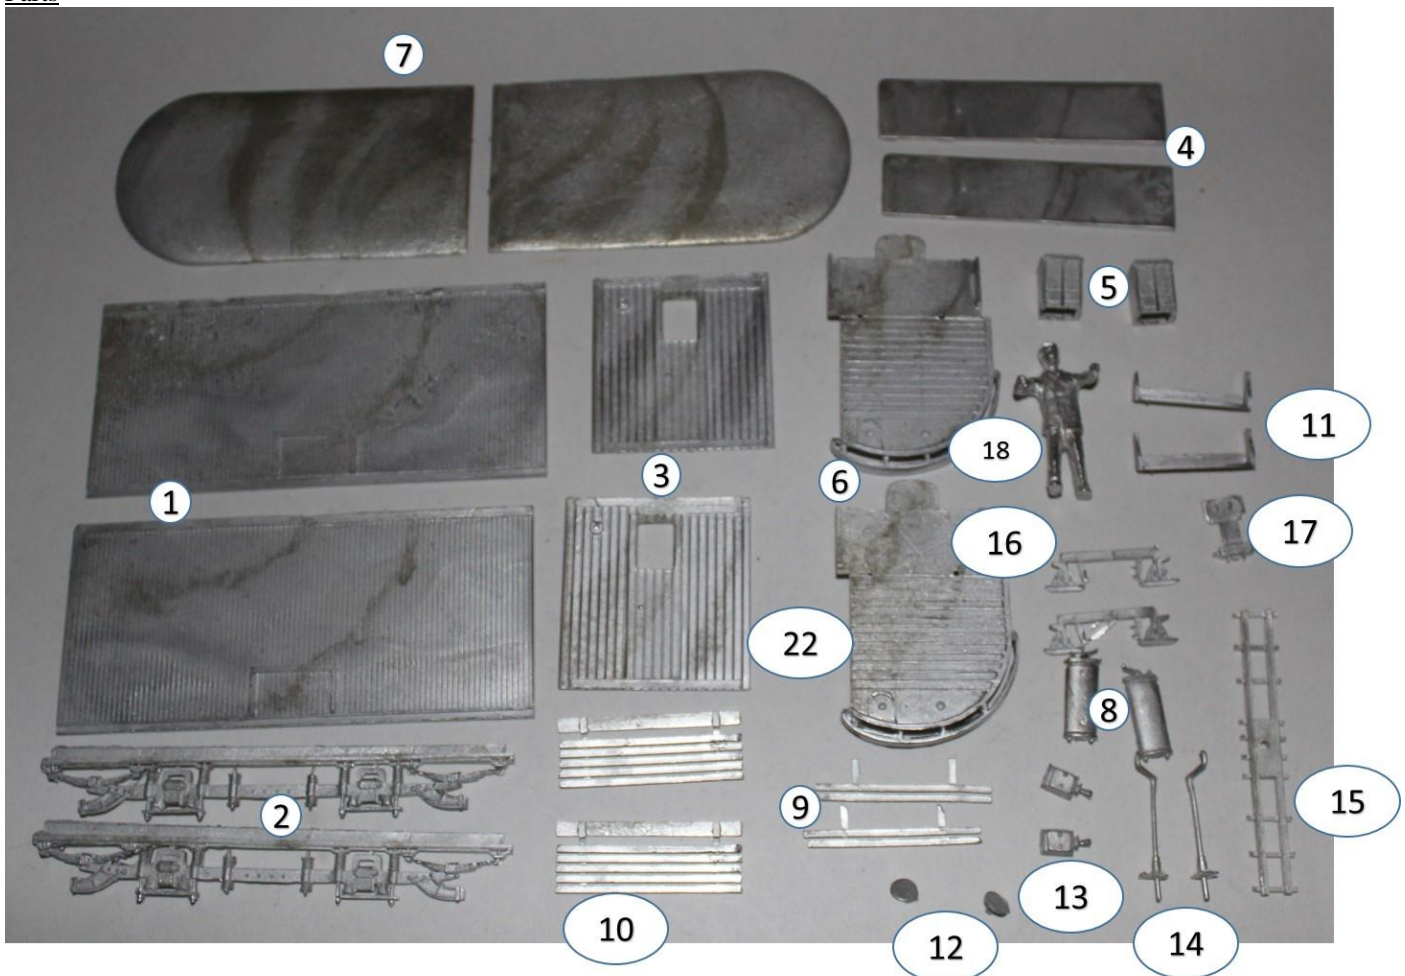


1. Works tram side	x2
2. Truck side	x2
3. Bulkheads	x2
4. Dash panels	x2
5. Resistance boxes	x2
6. Platforms	x2
7. Roof 1/2	x2
8. Controllers	x2
9. Life guards	x2
10. Life trays	x2
11. Steps	x2
12. Headlamps	x2
13. Canopy switches	x2
14. Handbrakes	x2
15. Trolley plank	x1
16. Plough carrier	x2
17. Plough	x1
18. Driver	x1

Build Steps

1. Remove the channel section from the bottom of the body sides as they are not needed with the truck sides supplied.
2. Attach truck sides to body sides ensuring exact centrality



3. Fix bulkheads to sides squarely and marry subassemblies to produce a box effect

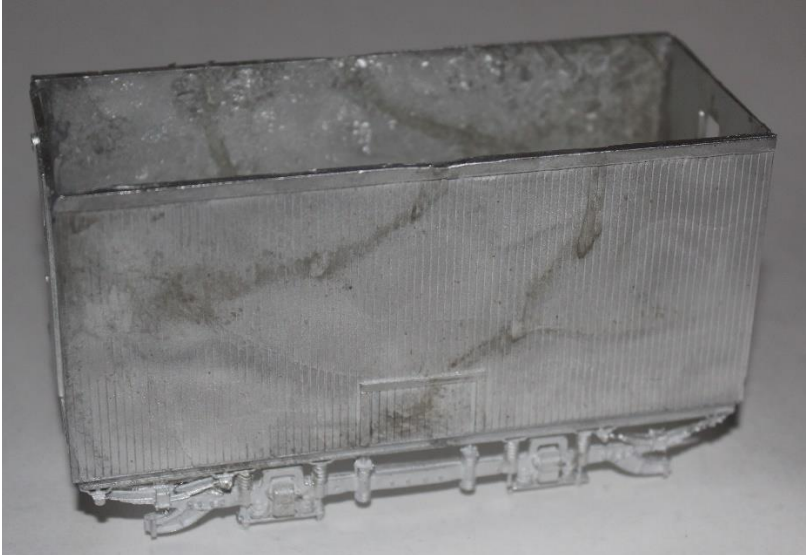

4. With model inverted, attach the platforms centrally under the bulkheads with the raised sections flush with the back of the bulkhead.
5. Bend the dash panels to fit the curve of the platform, trim to length as required. Fit the headlamp centrally.



6. Turn model over and fix the steps and under-gear ie life guards under the front panels and the life trays attach to the ends of the truck sides. Fit the plough carriers behind the middle of the truck sides.



7. Fix the two halves of the roof together and fit.
8. Fix the trolley plank to the centre of the roof.

